

EA: Exhaust Air to Outside
 OA: Outside Air Intake
 RA: Room Air to be Exhausted
 FA: Fresh Air to Inside

Scale: 1" = 24"
 Do not scale drawing


© RenewAire LLC, 2003

EV450RT
 DIMENSIONS




EA: Exhaust Air to Outside
 OA: Outside Air Intake
 RA: Room Air to be Exhausted
 FA: Fresh Air to Inside

RTV

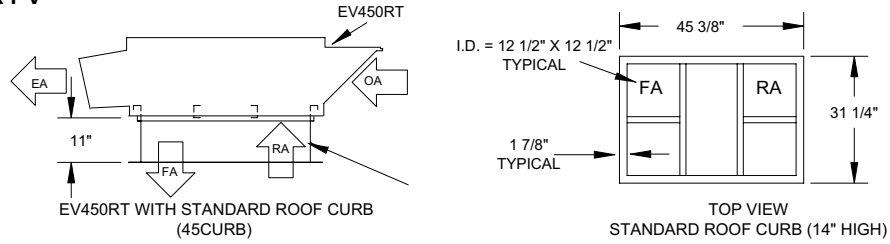


Standard Roof Curb Shown (available option).
 Curbs for sloped roofs or metal roofing are available on a custom basis from RenewAire or from local curb fabricators.

RTR/RTF

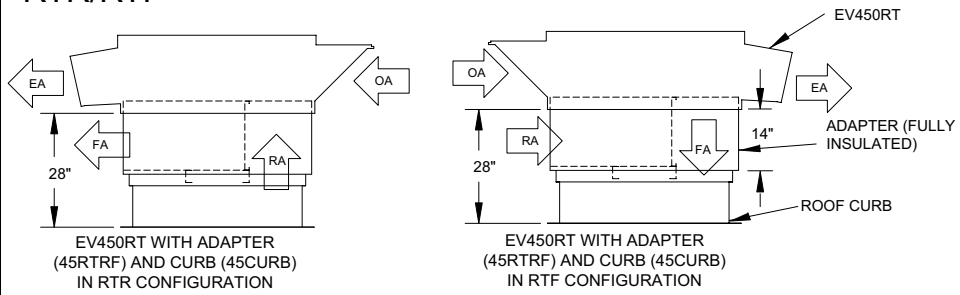

For horizontal connection of either the Fresh Air duct or the Return Air duct, stack the optional RTF/RTR Adapter on the Standard Roof Curb. Duct openings to be field cut into adapter. Opening location and size is flexible.

RTEC/RTH

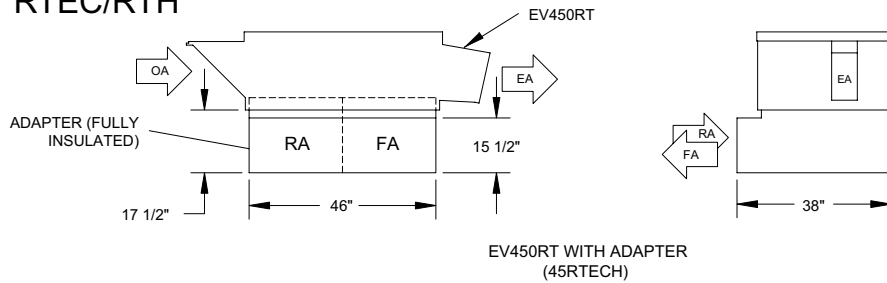

The RTH/RTEC Adapter allows horizontal connection of both the Fresh Air and the Return Air ducts. It is also possible to connect the adapter directly to the return plenum of most Rooftop Units (openings must be cut into RTU) Duct openings to be field cut into adapter. Opening location and size is flexible.

EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 FA: Fresh Air to inside

© RenewAire LLC, 2003

Scale: 1" = 24"
 Do not scale drawing

EV450RT
 DIMENSIONS

